



# HP Compaq 6710b Wireless Card Replacement

Take out your wireless adaptor!

Written By: Khulan Orgil



## INTRODUCTION

Make sure your computer is off and battery is out before attempting to replace your wireless adaptor.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-


## Step 1 — Battery

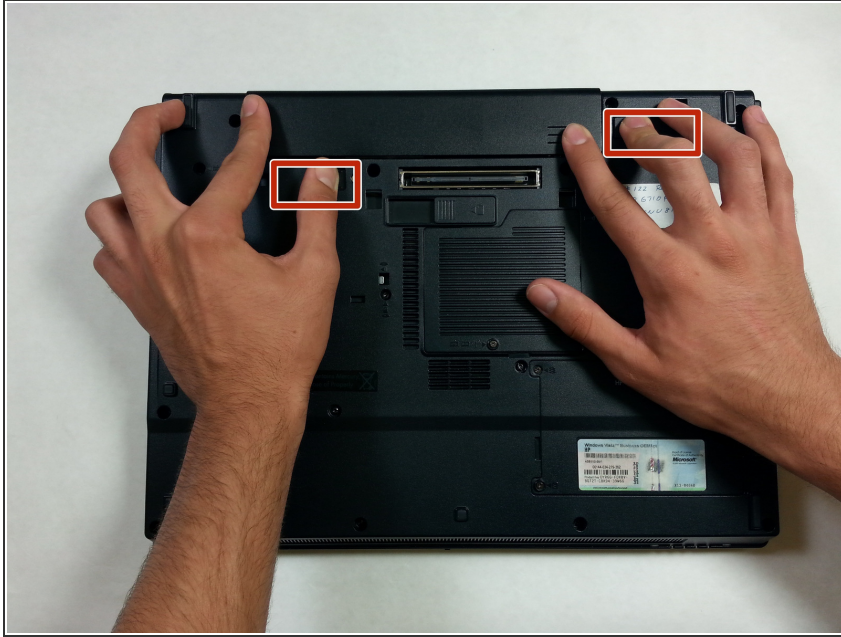

**⚠** Turn off your computer! Taking out the battery while it's still on is dangerous!

- Flip the laptop over to the back.
- Using two hands, push on the tabs while gently taking out the battery.

## Step 2 — Wireless Card

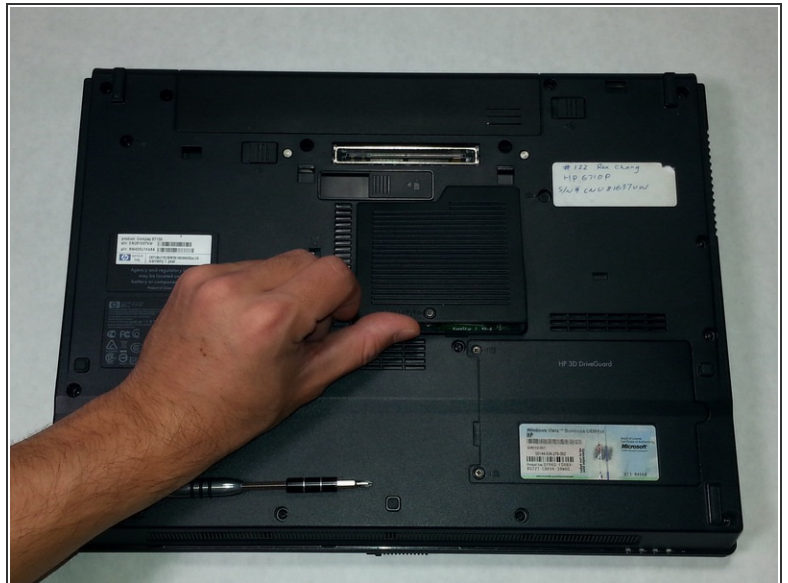

**⚠** Make sure the computer is off.

- Using a Phillips #1, unscrew the 5mm screw on the bottom of the laptop
- Remove the back cover plate.
- ⓘ The cover has popping tabs so it might require a small amount of force to remove.



## Step 3



- Using a blue plastic prying tool, gently pry off the 2 connectors.

☑ The black cable goes on the connection closer to where the cables originate, while the white cable goes on the farther connection.

## Step 4



- Using the Phillips #1 screwdriver, unscrew the 2 3mm screws.

ⓘ Adaptor is spring-loaded.

- You can now take out the adaptor.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-12 10:00:21 PM.